


Communication Guide for Felicity Battery and Sol-Ark Inverter

CAN Matched Hybrid Inverter Brands			
Brand	Model	Communication protocol	Cable Supply
Sol-Ark	Sol-Ark 15K-2P-N	CAN	RJ45
	Sol-Ark 12K / 8K / 5K (Outdoor)		
	Sol-Ark 12K / 8K Legacy (Indoor)		


(1) The corresponding communication pins are defined in the following table. You can make communication cables according to this table.

	FelicityESS	Luxpower
CAN_L	Pin3	Pin5
CAN_H	Pin4	Pin4

(Order of Communication Cable)

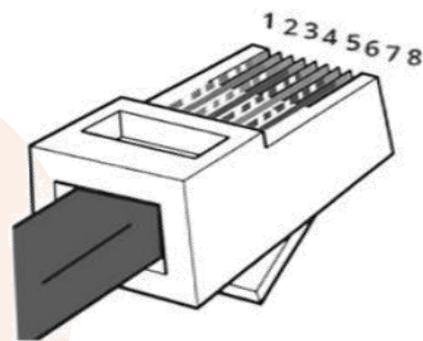


(RJ45 Pin Sequence)

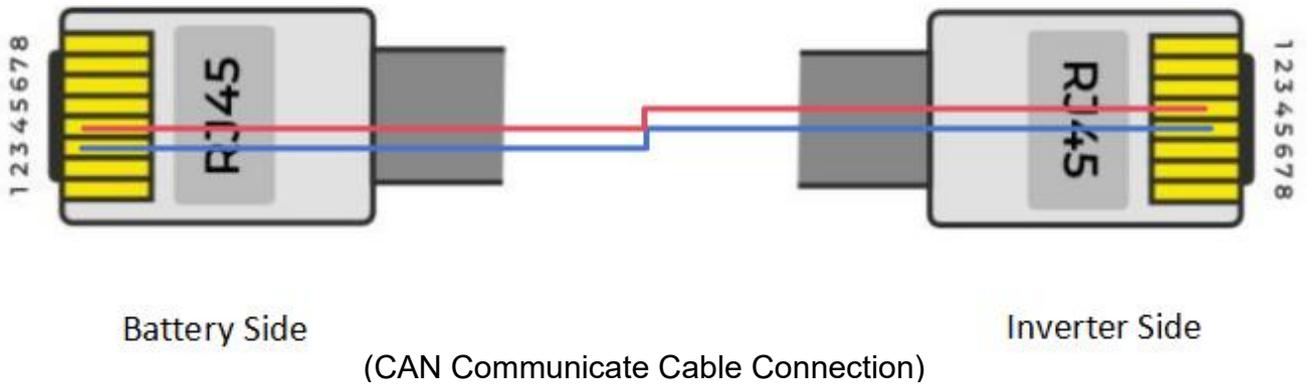

(2) Set the battery DIP switch according to the table below.

Parallel DIP Switch


No.of BAT	1	2	3	4	5	6	7	8	9	10	11	12
1PCS	1,5 ON											
2PCS	1,5 ON	2,5 ON										
3PCS	1,5 ON	2 ON	1,2,5ON									
4PCS	1,5 ON	2 ON	1,2 ON	3,5ON								
5PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3,5ON							
6PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3 ON	2,3,5ON						
7PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3 ON	2,3 ON	1,2,3,5ON					
8PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3 ON	2,3 ON	1,2,3 ON	4,5ON				
9PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3 ON	2,3 ON	1,2,3 ON	4 ON	1,4,5ON			
10PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3 ON	2,3 ON	1,2,3 ON	4 ON	1,4 ON	2,4,5ON		
11PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3 ON	2,3 ON	1,2,3 ON	4 ON	1,4 ON	2,4 ON	1,2,4,5ON	
12PCS	1,5 ON	2 ON	1,2 ON	3 ON	1,3 ON	2,3 ON	1,2,3 ON	4 ON	1,4 ON	2,4 ON	1,2,4,ON	3,4,5ON

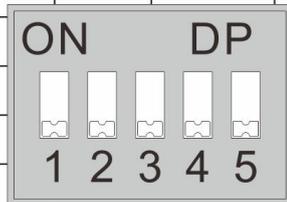


Note: The inverter needs to be connected to the first battery, that is, the battery pack with the 1,5 ON.

Note: The setting takes effect only after the battery is restarted


(3) Set up on the inverter according to the following procedure

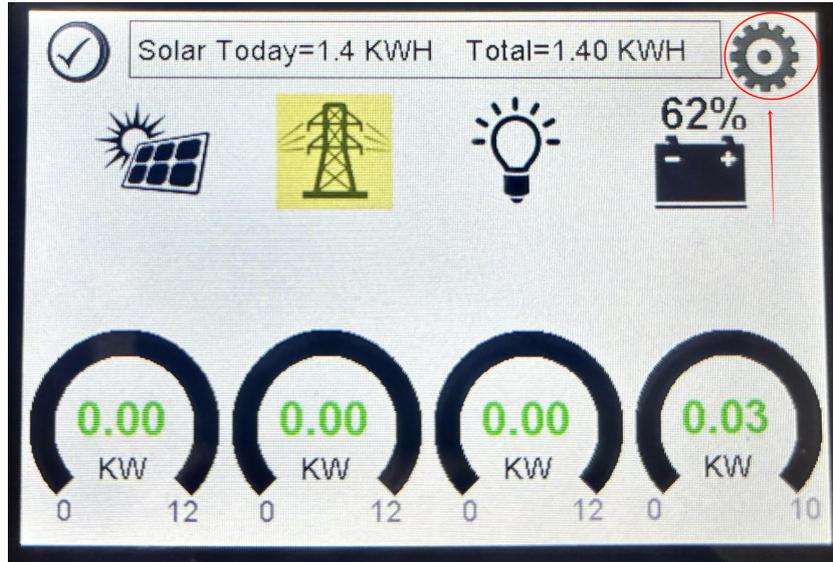


Step 1: Upper right corner to enter the settings interface

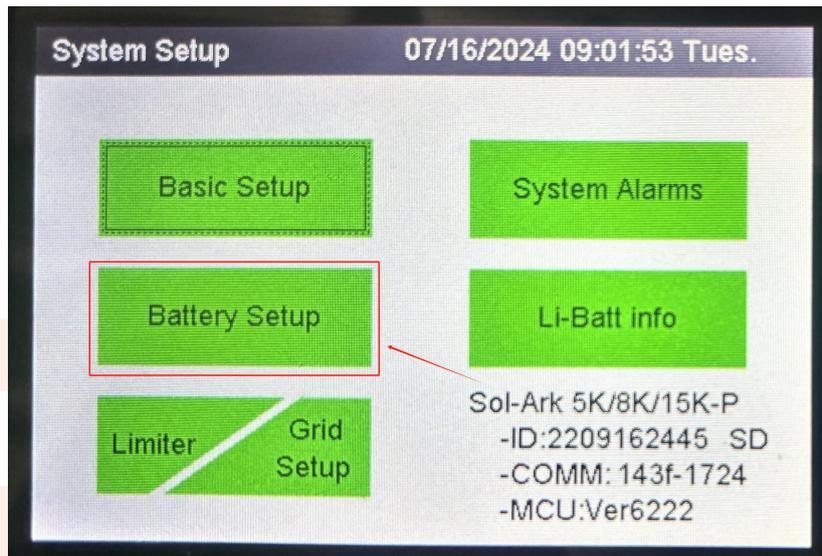


Step 2: Enter the Battery Setup screen

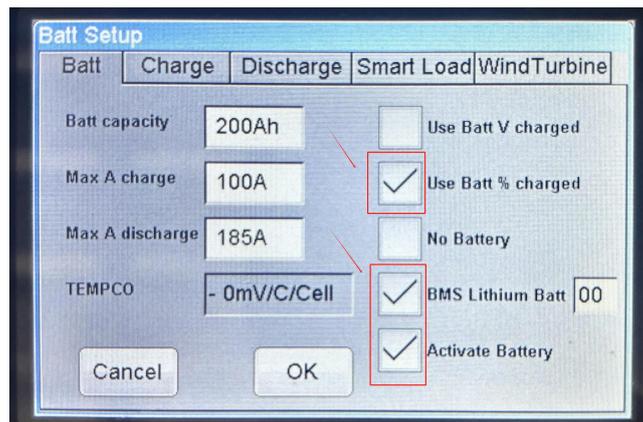

Step 3: Tick the three options on the right side of above picture

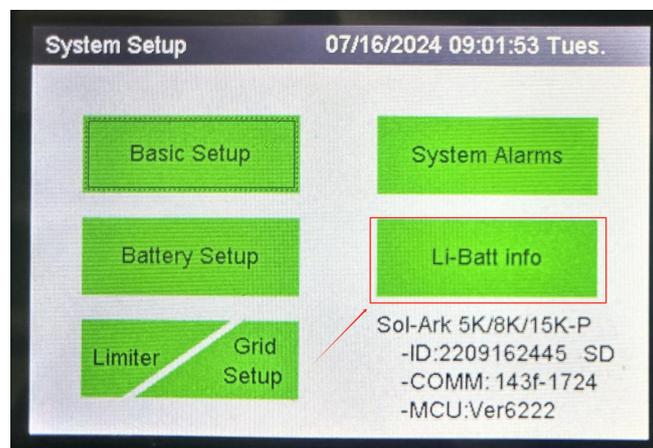

Step 4: Return to the previous page to enter the Li-Batt info screen

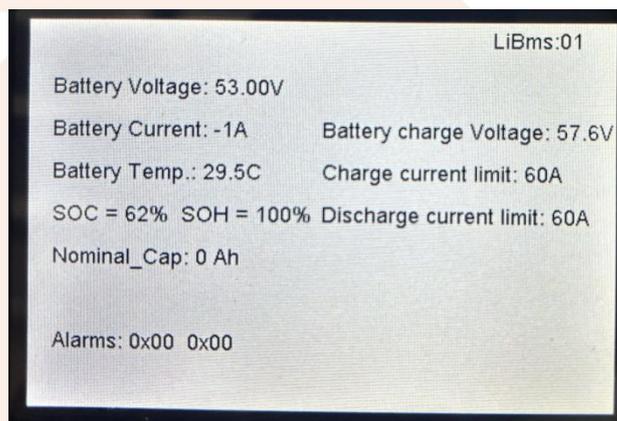

If the communication is successful, you can see the basic information of the battery