

# Inverter matching list

## Revision History

Version	Revision Date	Revision Description
1.0	2025.3	Replaced with FelicitySolar's logo
2.0	2025.9	Distinguish between official cooperative testing and our own testing

## We Felicity hereby authorize

**High voltage battery packs are compatible with the following**

**brands of inverters**

### CAN/RS485 Matched Hybrid Inverter Brands

Brand	Model	Communication protocol	Cable supply
Felicitysolar	T-REX-10KHP3G01 T-REX-50KHP3G01 IVGM100600 IVGM50KHP3G1 IVGM50/40/30/29.9/25KHP3G2	RS485	RJ45
Deye	SUN-(6-20)K-SG01HP3-EU-AM2 SUN-(25-50)K-SG01HP3-EU-BM2/3/4	CAN	RJ45
Solis (official)	S6-EH3P(5-10K)-H-EU S6-EH3P (12-20K) -H-EU S6-EH3P (12-20)K-ND-H	CAN	RJ45
Good we	GW (5-30)K_ET GW5/6.5/8/10KN-ET	CAN	RJ45
Megarevo (official)	R(6-15K)H3	CAN	RJ45

Afore	AF(3-30)K-TH AF(3-12)K-THP	CAN	RJ45
INVT (official)	iMars XD5-12KTR	CAN	RJ45
SOFAR	HYD 5-20KTL-3PH	CAN	RJ45
SUNSYNK	SUNSYNK-30K-SG01HP3-EU-BM3 SUNSYNK-50K-SG01HP3-EU-BM4	CAN	RJ45

\* Felicity high-voltage battery packs are compatible with the above-mentioned inverter brands for communication:


**Note:** Our battery is using **PYLON protocol**, in theory, our battery can communicate with inverters that support the PYLON protocol. For additional support, please contact our customer service staff.



Whatsapp:

mail: [felicitysupport@felicitysolar.com](mailto:felicitysupport@felicitysolar.com)

The corresponding communication pins are defined in the following table. You can make communication cables according to this table.

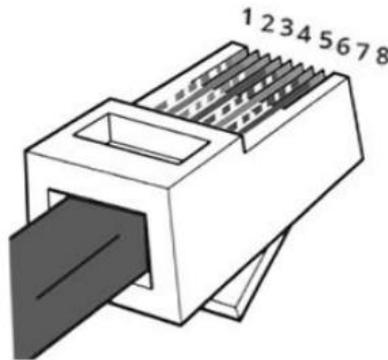

**(1)RS485 Protocol pins defined.**

RS485	NO.	FLS
	Pin1	GND
	Pin2	×
	Pin3	×
	Pin4	×
	Pin5	RS485B
	Pin6	RS485A
	Pin7	RS485A ( LUX-X-96050HG01&LUX-Y-48100HG01&FLH96050SG1&FLH48100UG1 )
	Pin8	RS485B ( LUX-X-96050HG01&LUX-Y-48100HG01&FLH96050SG1&FLH48100UG1 )

**(2)CAN Protocol pins defined.**

	NO.	FLS	Solis	Deye	Megarevo	Afore	Goodwe	SOFAR	INVT	SUNSYNK	
RS485	Pin1	GND	×	×	×	CAN_H	×	×	×	×	
	Pin2	×	×	×	×	×	×	×	×	×	
	Pin3	×	×	×	×	CAN_L	×	×	×	×	
	Pin4	CAN_H ( LUX-X-96050HG01&LUX-Y-48100HG01&FLH96050SG1&FLH48100UG1 )		CAN_H	CAN_H	CAN_H	×	CAN_H	×	CAN_H	CAN_H
	Pin5	CAN_L ( LUX-X-96050HG01&LUX-Y-48100HG01&FLH96050SG1&FLH48100UG1 )		CAN_L	CAN_L	CAN_L	×	CAN_L	×	CAN_L	CAN_L
	Pin6	×	×	×	×	×	×	×	×	×	
	Pin7	CAN_L	×	×	×	×	×	CAN_H	×	×	
	Pin8	CAN_H	×	×	×	×	×	CAN_L	×	×	

**(3) For example, if you want to let our FLH48100UG1 battery to communicate with Solis inverter directly, you need to make a communication cable like the one below.**

	NO.	Felicitysolar	Solis
CAN	Pin1	GND	×
	Pin2	×	×
	Pin3	×	×
	Pin4	CAN_H ( FLH48100UG1 )	CAN_H
	Pin5	CAN_L ( FLH48100UG1 )	CAN_L
	Pin6	×	×
	Pin7	CAN_L	×
	Pin8	CAN_H	×

